

Instructions for use

- Before use, please check whether the components are installed in place and connected firmly.
- It is not allowed to use in streets, roads, slopes, ditches and other idle danger areas.
 - Please don't use it on smooth ground, such as marble, tile and so on.
 - Do not switch the forward / backward switch while the electric vehicle is running.
 - Be careful not to let the child stand in the seat.
 - It is not allowed to change the circuit and additional live devices of this vehicle.
 - The remote control and electric vehicle shall not be allowed to rain or be used in the water.
 - Do not pour water or other liquid on the vehicle or immerse it in water in other ways and keep away from the fire source to avoid damage to the circuit.
 - When encountering obstacles, the electric vehicle stops running. Please leave the obstacles before riding.
 - Don't use it indoors to avoid damaging furniture or even wrestling children.
 - When the remote control battery is not enough, the vehicle will appear that it can only move forward by remote control, not the left and right directions, and the remote control distance is short.Shake and so on, please replace the battery immediately!
 - When the power of the acoustooptic battery is insufficient, there will be no acoustooptic function in the vehicle. Other functions are normal. Please replace the acoustooptic battery immediately.
 - This product is limited to one person, and cannot be overloaded. The maximum load is 20kg.
 - When not in use, please turn off the power switch. When not in use for a long time, please unplug the battery connector.

- *Note: the product picture, function and introduction of this manual are for reference only, subject to the material object.
- Charging instructions**
- When using the electric vehicle for the first time, the battery must be charged for 18 hours, otherwise the battery will be permanently damaged.Unable to repair.
- When charging, first plug the DC plug of the charger into the charging jack, and then plug the charger into the power socketEach time it is used for one hour, it must be charged in time. The normal charging time is 8-12 hours.And each charging time shall not exceed 20 hours.
- In the charging process, the charger and battery have heating phenomenon (below 60 °C) which belongs toNormal.
- If there is water in the connector, it cannot be charged, otherwise it may cause short circuit.This electric vehicle must use the charger and battery provided by this vehicle to avoid damaging the old charger and battery or electrical circuitWhen the electric vehicle is not used for a long time, it must be charged at least once a month.

warning

- In order for your baby to drive safely, you must pay attention to the following notices:
- The assembly and adjustment of the product must be carried out by adults. Please keep children away from moving parts
 - There are small parts inside, not suitable for children aged 12 months or less!
 - Children must use seat belt correctly when riding. Do not get close to the fire!
 - Children must use the product under the guidance of adults, and the carer must not leave during the use!
 - Do not allow children to stand or play on the footboard (or in the electric vehicle).
 - Battery charging must be carried out by adults. Please charge before using this product!
 - In order to avoid harm to children, please keep plastic bags and other packaging materials away from children! Danger of suffocation!
 - Do not use any accessories not provided by the manufacturer
 - Do not use the charger as a toy.
 - The maximum load-carrying capacity of the vehicle is 20kg, and overload is not allowed.
 - Applicable age range: 12-36 months
 - Toys cannot be connected to more than the recommended number of power supply.
 - When the vehicle is charging, the toy (vehicle) cannot be operated.

Installation steps



After installation, remoteThe controller needs to be installed with electricityPool, the new car needs to be rightCode, see code steps for detailsSee the back of the remote control.Ming Shu.